

#MG03 HAND FLASHER

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated below.

Directions:

Take the Hand Flasher and insert two size 'N' alkaline batteries (not included) in the battery holder. Insert the batteries so that they are facing in opposite directions. Without loading the Hand Flasher, remove the plastic cover from the brass firing contact at the end of the battery holder. Press the brass contact and look into the barrel. You'll see a glowing coil, similar to one in an automobile cigarette lighter. This glowing coil is the glo-plug. The fact that it glows tells you that the batteries are operational and the glo-plug is in good working order.

To prevent accidental firing while loading, replace the plastic cover on the brass firing contact. Take a pinch of Flash Cotton, fluff it up, and insert it into the barrel. Use a blunt instrument to press the cotton against the glo-plug coil. (The eraser end of a pencil works well for this.) Do not use a pointed instrument because the glo-plug coil can be easily damaged. Take a piece of flash paper, 2" square, ball it up, and insert it into the barrel. Use a blunt instrument to push the paper up against the cotton.

Grip the Flasher by the finger clips with the brass ears between the first and second fingers of your right hand, so that the Flasher is in the palm of your hand with the barrel pointing up. Bend the ears to fit the shape of your hand if necessary. Remove the plastic cover from the brass firing contact. The Flasher is now ready to fire. From this time forward, do not point the Flasher at any person or flammable object.

Gently squeeze your hand, pulling the brass contact against the battery holder. Depending on the strength of the battery and the condition of the glo-plug, you may have to squeeze the Flasher for up to a full second to ignite the Cotton. A flash of fire streaking out of the barrel will result.

CAUTION

NEVER USE FLASH POWDER IN THIS DEVICE !! An explosion will result.

Never fire at people, animals, or flammable objects; the fireball can travel up to 20 feet.

Tips:

If Cotton is unavailable, Flash Paper can be used alone.

If the glo-plug burns out, it can be easily replaced by screwing it outward from the barrel (counter-clockwise) with a small wrench.

Don't over tighten the new plug.

Finger clips can be trimmed for a more comfortable fit.

Since the batteries are small, they will go dead fast. When testing, release the brass contact as soon as you see the plug glowing. Test only once, right before loading.

If the Paper shoots out without lighting, you used too much Cotton.

WARNING!!!

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer

is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult

the technical manual "Special Effects with Fire and Smoke" available from us or your dealer.

DANGER! USE AT YOUR OWN RISK!