

Instruction manual

Please read carefully before operating



Le Maitre

Micro-fog

Portable smoke machine

Electrical connections

It is important that the mains plug is correctly fused. UK connections should be via a 3-pin plug, fitted with a 5 amp fuse.

Wiring should be in accordance with the following colour coding:

Brown – Live
Green/Yellow – Earth
Blue – Neutral

It is imperative that this machine is **earthed** under **all** circumstances – failure to ensure correct earthing could result in serious injury.

Power rating 1.2 KW – 240 Volts AC 50Hz
1.2 KW – 110 Volts AC 60Hz



Le Maitre

Micro-fog

Portable smoke machine

Operating instructions

- 1 Screw Le Maitre smoke fluid canister into the aerosol base which is located at the rear of the machine. The aerosol base contains an 'O' ring seal which, when the canister is fully tightened, will prevent smoke fluid escaping from the joint.
- 2 Plug the Micro-Fog into a suitable mains supply. The unit will then automatically start to heat and will be ready to operate in approximately 5 minutes.

During the heating process, the tri-coloured LED will run through the following process which shows the exact heating status.

Red to yellow flash	–	Heating – do not operate
Green flashing	–	Ready to operate
Green steady	–	Ready – heater switched off
Red flash	–	Refer for service

Le Maitre, 6 Forval Close, Wandle Way
Mitcham, Surrey CR4 4NE

Tel 0181 646 2222

Fax 0181 646 1955